



TYPICAL APPLICATION

RWA1000 – inward opening

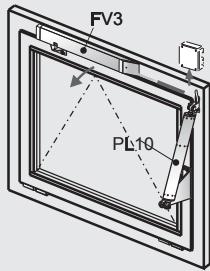


View on bottom-hung window

RWA1000 – inward opening

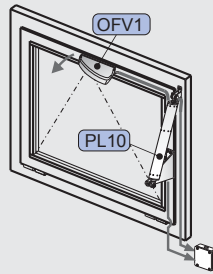


View on bottom-hung window

RWA1000 TE – inward opening

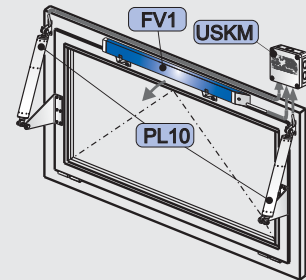


View on bottom-hung window

RWA1000 – inward opening

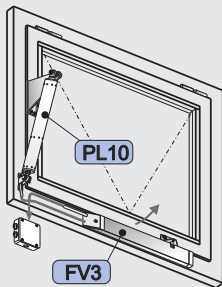


View on top-hung window

RWA1000 – inward opening

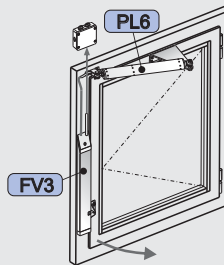


View on side-hung window

RWA1100 – outward opening

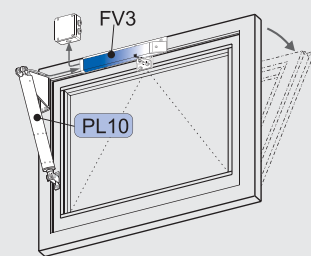


View on bottom-hung window

RWA1100 – outward opening

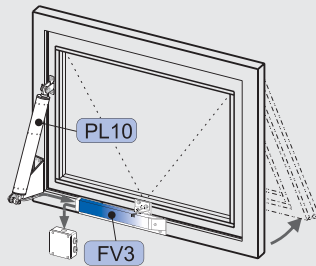


View on top-hung window

RWA1100 TE – outward opening

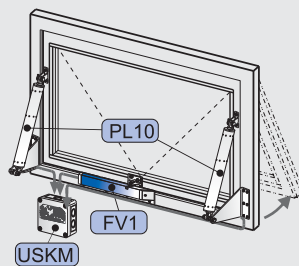


View on top-hung window

RWA1100 – outward opening

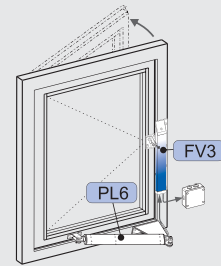


View on side-hung window

RWA1050 – inward opening

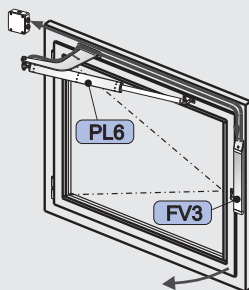


View on side-hung window

RWA1050 TE – inward opening

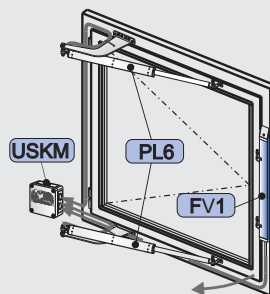

View on side-hung window

RWA1050 TE – inward opening

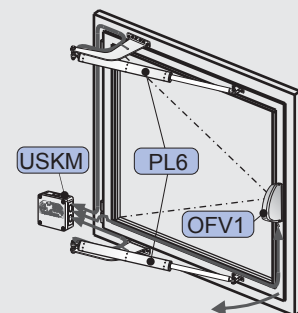

View on side-hung window